

OPTIFLUX 2000 Handbook

Electromagnetic flow sensor

The documentation is only complete when used in combination with the relevant documentation for the signal converter.



:	: IMPRINT : : : : : : : : : : : : : : : : : : :	
	All rights reserved. It is prohibited to reproduce this docuthe prior written authorisation of KROHNE Messtechnik (
	Subject to change without notice.	
	Copyright 2012 by KROHNE Messtechnik GmbH - Ludwig-Krohne-Str. 5 - 4	7058 Duisburg (Germany)

1 Safety instructions	5
1.1 Intended use	F
1.2 Certification	
1.3 Safety instructions from the manufacture	
	6
	6
	on 7
1.3.5 Warnings and symbols used	8
1.4 Safety instructions for the operator	8
2 Device description	9
2.1 Scope of delivery	C
2.2 Device description	
2.3 Nameplate	
2.5 Nameplate	
3 Installation	11
3.1 Notes on installation	
3.2 Storage	
3.3 Transport	
3.4 Pre-installation requirements	
3.5 Installation conditions	
S Comments	
•	
S S S S S S S S S S S S S S S S S S S	
·	
3.6 Mounting	
	18
4 Electrical connections	21
4.1 Safety instructions	
4.2 Grounding	
4.3 Virtual reference for IFC 300 (C, W and F)	
4.4 Connection diagrams	23

5	Service	24
	E. 1. Consequente que il abilita.	2.4
	5.1 Spare parts availability	24
	5.2 Availability of services	
	5.3 Returning the device to the manufacturer	
	5.3.1 General information	
	5.3.2 Form (for copying) to accompany a returned device	
	5.4 Disposal	
6	Technical data	26
	6.1 Measuring principle	26
	6.2 Technical data	
	6.3 Legal metrology	
	6.3.1 OIML R49	
	6.3.2 MID Annex MI-001	
	6.4 Measuring accuracy	
	6.5 Dimensions and weights	
	6.6 Vacuum load	
	0.0 Vacuum toau	42
7	Notes	43

1.1 Intended use



CAUTION!

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.



INFORMATION!

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

The **OPTIFLUX 2000** is designed exclusively to measure the flow of electrically conductive, liquid media.



WARNING!

If the device is not used according to the operating conditions (refer to chapter Technical data), the intended protection could be affected.

1.2 Certification



The device fulfils the statutory requirements of the following EC directives:

- EMC Directive 2004/108/EC in conjunction with EN 61326-1: 2006
- Low Voltage Directive 2006/95/EC in conjunction with EN 61010-1: 2001
- Pressure Equipment Directive 97/23/EC

The manufacturer certifies successful testing of the product by applying the CE marking.



DANGER!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

1.3 Safety instructions from the manufacturer

1.3.1 Copyright and data protection

The contents of this document have been created with great care. Nevertheless, we provide no guarantee that the contents are correct, complete or up-to-date.

The contents and works in this document are subject to copyright. Contributions from third parties are identified as such. Reproduction, processing, dissemination and any type of use beyond what is permitted under copyright requires written authorisation from the respective author and/or the manufacturer.

The manufacturer tries always to observe the copyrights of others, and to draw on works created in-house or works in the public domain.

The collection of personal data (such as names, street addresses or e-mail addresses) in the manufacturer's documents is always on a voluntary basis whenever possible. Whenever feasible, it is always possible to make use of the offerings and services without providing any personal data.

We draw your attention to the fact that data transmission over the Internet (e.g. when communicating by e-mail) may involve gaps in security. It is not possible to protect such data completely against access by third parties.

We hereby expressly prohibit the use of the contact data published as part of our duty to publish an imprint for the purpose of sending us any advertising or informational materials that we have not expressly requested.

1.3.2 Disclaimer

The manufacturer will not be liable for any damage of any kind by using its product, including, but not limited to direct, indirect or incidental and consequential damages.

This disclaimer does not apply in case the manufacturer has acted on purpose or with gross negligence. In the event any applicable law does not allow such limitations on implied warranties or the exclusion of limitation of certain damages, you may, if such law applies to you, not be subject to some or all of the above disclaimer, exclusions or limitations.

Any product purchased from the manufacturer is warranted in accordance with the relevant product documentation and our Terms and Conditions of Sale.

The manufacturer reserves the right to alter the content of its documents, including this disclaimer in any way, at any time, for any reason, without prior notification, and will not be liable in any way for possible consequences of such changes.

1.3.3 Product liability and warranty

The operator shall bear responsibility for the suitability of the device for the specific purpose. The manufacturer accepts no liability for the consequences of misuse by the operator. Improper installation and operation of the devices (systems) will cause the warranty to be void. The respective "Standard Terms and Conditions" which form the basis for the sales contract shall also apply.

1.3.4 Information concerning the documentation

To prevent any injury to the user or damage to the device it is essential that you read the information in this document and observe applicable national standards, safety requirements and accident prevention regulations.

If this document is not in your native language and if you have any problems understanding the text, we advise you to contact your local office for assistance. The manufacturer can not accept responsibility for any damage or injury caused by misunderstanding of the information in this document.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device. Special considerations and precautions are also described in the document, which appear in the form of underneath icons.

1.3.5 Warnings and symbols used

Safety warnings are indicated by the following symbols.



DANGER!

This information refers to the immediate danger when working with electricity.



DANGER!

This warning refers to the immediate danger of burns caused by heat or hot surfaces.



DANGER!

This warning refers to the immediate danger when using this device in a hazardous atmosphere.



DANGER!

These warnings must be observed without fail. Even partial disregard of this warning can lead to serious health problems and even death. There is also the risk of seriously damaging the device or parts of the operator's plant.



WARNING!

Disregarding this safety warning, even if only in part, poses the risk of serious health problems. There is also the risk of damaging the device or parts of the operator's plant.



CAUTION!

Disregarding these instructions can result in damage to the device or to parts of the operator's plant.



INFORMATION!

These instructions contain important information for the handling of the device.



LEGAL NOTICE!

This note contains information on statutory directives and standards.



HANDLING

This symbol designates all instructions for actions to be carried out by the operator in the specified sequence.

i RESULT

This symbol refers to all important consequences of the previous actions.

1.4 Safety instructions for the operator



WARNING!

In general, devices from the manufacturer may only be installed, commissioned, operated and maintained by properly trained and authorized personnel.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device.

2.1 Scope of delivery



INFORMATION!

Do a check of the packing list to make sure that you have all the elements given in the order.



INFORMATION!

Inspect the cartons carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.



INFORMATION!

The remote version will arrive in two cartons. One carton contains the converter and one carton contains the sensor.

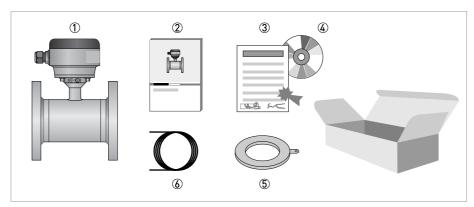


Figure 2-1: Scope of delivery

- 1 Ordered flowmeter
- 2 Product documentation
- 3 Factory calibration report
- 4 CD-ROM with product documentation in available languages
- 5 Grounding rings (optional)
- 6 Signal cable (remote versions only)



INFORMATION!


Assembly materials and tools are not part of the delivery. Use the assembly materials and tools in compliance with the applicable occupational health and safety directives.

2.2 Device description

Your measuring device is supplied ready for operation. The factory settings for the operating data have been made in accordance with your order specifications.

The following versions are available:

- Compact version (the signal converter is mounted directly on the measuring sensor)
- Remote version (measuring sensor with connection box and a signal converter in a remote (field) housing)

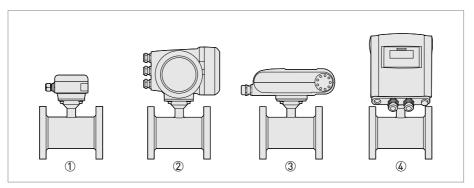


- 1 Remote version
- 2 Compact version with IFC 300 signal converter
- 3 Compact version with IFC 100 (0°) signal converter
- 4 Compact version with IFC 100 (45°) signal converter

2.3 Nameplate



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

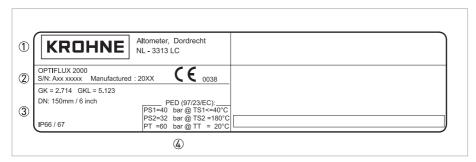

- 1 Name and address of the manufacturer
- 2 Type designation of the flowmeter and CE sign with number(s) of notified body / bodies
- 3 Calibration data
- 4 PED data

3.1 Notes on installation



INFORMATION!

Inspect the cartons carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.



INFORMATION!

Do a check of the packing list to make sure that you have all the elements given in the order.



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2 Storage

- Store the device in a dry and dust-free location.
- · Avoid lasting direct exposure to the sun.
- · Store the device in its original packaging.
- Storage temperature: -50 ...+70°C / -58...+158°F

3.3 Transport

Signal converter

· No special requirements.

Compact version

- Do not lift the device by the signal converter housing.
- Do not use lifting chains.
- To transport flange devices, use lifting straps. Wrap these around both process connections.

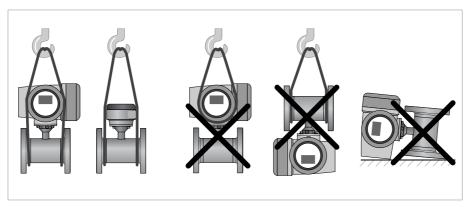


Figure 3-1: Transport

3.4 Pre-installation requirements

Make sure that you have all necessary tools available:

- Allen key (4 mm)
- Small screwdriver
- · Wrench for cable glands
- Wrench for wall mounting bracket (remote version only)
- Torque wrench for installing flowmeter in pipeline

3.5 Installation conditions

3.5.1 General requirements



INFORMATION!

The following precautions must be taken to ensure reliable installation.

- Make sure that there is adequate space to the sides.
- Protect the signal converter from direct sunlight and install a sun shade if necessary.
- Signal converters installed in control cabinets require adequate cooling, e.g. by fan or heat exchanger.
- Do not expose the signal converter to intense vibration. The flowmeters are tested for a vibration level in accordance with IEC 68-2-64.

3.5.2 Inlet and outlet

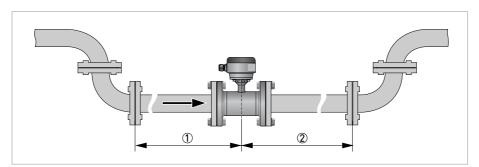


Figure 3-2: Recommended inlet and outlet

- 1 ≥ 5 DN
- $2 \geq 2 DN$

3.5.3 Mounting position

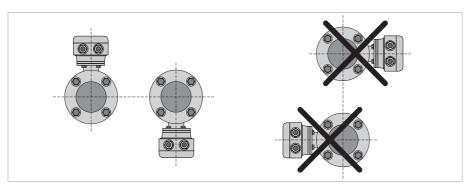


Figure 3-3: Mounting position

3.5.4 Flange deviation



CAUTION!

Max. permissible deviation of pipe flange faces: L_{max} - $L_{min} \le 0.5$ mm / 0.02"

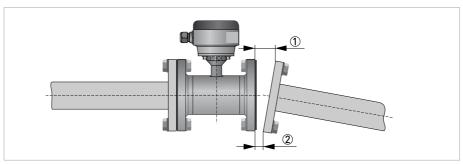


Figure 3-4: Flange deviation

- 1 L_{max}
- $2 L_{min}$

3.5.5 T-section

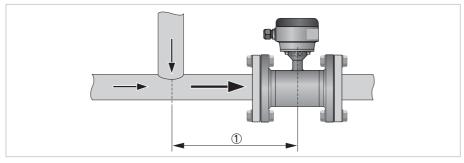


Figure 3-5: Distance behind a T-section

1 ≥ 10 DN

3.5.6 Vibration

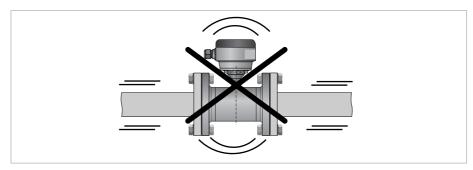


Figure 3-6: Avoid vibrations

3.5.7 Magnetic field

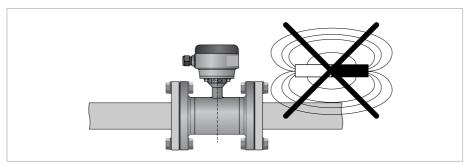


Figure 3-7: Avoid magnetic fields

3.5.8 Bends

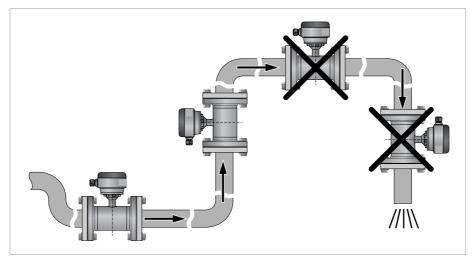


Figure 3-8: Installation in bending pipes

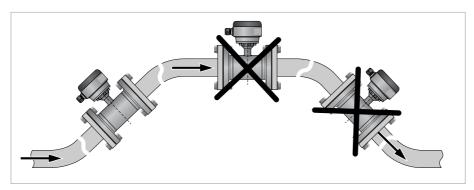


Figure 3-9: Installation in bending pipes

3.5.9 Open discharge

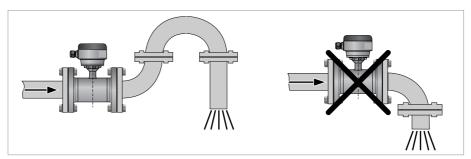


Figure 3-10: Installation in front of an open discharge

3.5.10 Control valve

 


Figure 3-11: Installation in front of a control valve

3.5.11 Air venting

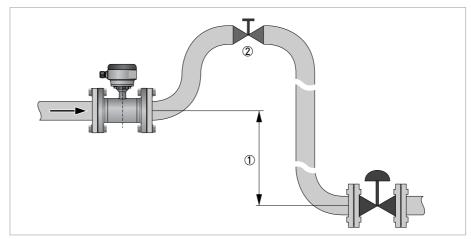


Figure 3-12: Air venting

- $1 \geq 5 \text{ m}$
- 2 Air ventilation point

3.5.12 Pump

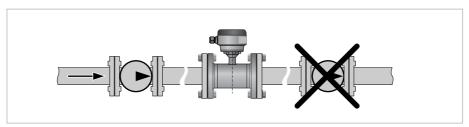


Figure 3-13: Installation behind a pump

3.5.13 Temperatures



CAUTION!

Protect the device from direct sunlight.

Temperature range	Proce	ss [°C]	Ambie	ent [°C]	Proce	ss [°F]	Ambie	ent [°F]
	min.	max.	min.	max.	min.	max.	min.	max.
Hard rubber / Polyolefin 1								
Separate flow sensor	-5	80	-40	65	23	176	-40	149
Compact with IFC 300	-5	80	-40	65	23	176	-40	149
Compact with IFC 100	-5	80	-40	65	23	176	-40	149
Polypropylene 2								
Separate flow sensor	-5	90	-40	65	23	194	-40	149
Compact with IFC 300	-5	90	-40	65	23	194	-40	149
Compact with IFC 100	-5	90	-40	65	23	194	-40	149

¹ Polyolefin is only available for DN200...1000

² Polypropylene is only available for DN25...150

3.6 Mounting

3.6.1 Torques and pressures

The maximum pressure and torques values for the flowmeter are theoretical and calculated for optimum conditions and use with carbon steel flanges.

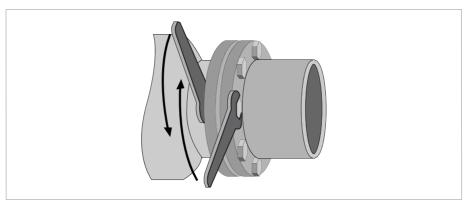


Figure 3-14: Tightening of bolts



Tightening of bolts

- Always tighten the bolts uniformely and in diagonally opposite sequence.
- Do not exceed the maximum torque value.
- Step 1: Apply approx. 50% of max. torque given in table.
- Step 2: Apply approx. 80% of max. torque given in table.
- Step 3: Apply 100% of max. torque given in table.

Nominal size DN [mm]	Pressure rating	Bolts	IV	lax. torque [Nm]	1
Div [iiiii]	ruting		Polyolefin	Polypropylene	Hard rubber
25	PN 40	4 × M 12	-	22	11
32	PN 40	4 × M 16	-	37	19
40	PN 40	4 × M 16	-	43	25
50	PN 40	4 × M 16	-	55	31
65	PN 16	4 × M 16	-	51	42
65	PN 40	8 × M 16	-	38	21
80	PN 40	8 × M 16	-	47	25
100	PN 16	8 × M 16	-	39	30
125	PN 16	8 × M 16	-	53	40
150	PN 16	8 × M 20	-	68	47
200	PN 10	8 × M 20	68	-	68
200	PN 16	12 × M 20	45	-	45
250	PN 10	12 × M 20	65	-	65
250	PN 16	12 × M 24	78	-	78
300	PN 10	12 × M 20	76	-	76
300	PN 16	12 × M 24	105	-	105
350	PN 10	16 × M 20	75	-	75
400	PN 10	16 × M 24	104	-	104
450	PN 10	20 × M 24	93	-	93
500	PN 10	20 × M 24	107	-	107
600	PN 10	20 × M 27	138	-	138
700	PN 10	24 × M 27	163	-	163
800	PN 10	24 × M 30	219		219
900	PN 10	28 × M 30	205	-	205
1000	PN 10	28 × M 33	261	-	261

¹ The specified torque values are dependent on variables (temperature, bolt material, gasket material, lubricants, etc.) which are not within the control of the manufacturer. Therefore these values should be regarded as indicative only.



INFORMATION!

Other sizes / pressure ratings on request.

Nominal size [inches]	Flange class [lb]	Bolts	Max. torque [lbf.ft] 1		
[[]		Polyolefin	Polypropylene	Hard rubber
1	150	4 × 1/2"	-	6.7	3.2
1 1/2	150	4 × 1/2"	-	13	9
2	150	4 × 5/8"	-	24	17
3	150	4 × 5/8"	-	43	29
4	150	8 × 5/8"	-	34	23
6	150	8 × 3/4"	-	61	38
8	150	8 × 3/4"	51	-	51
10	150	12 × 7/8"	58	-	58
12	150	12 × 7/8"	77	-	77
14	150	12 × 1"	69	-	69
16	150	16 × 1"	67	-	67
18	150	16 × 1 1/8"	105	-	105
20	150	20 × 1 1/8"	94	-	94
24	150	20 × 1 1/4"	133	-	133

¹ The specified torque values are dependent on variables (temperature, bolt material, gasket material, lubricants, etc.) which are not within the control of the manufacturer. Therefore these values should be regarded as indicative only.



INFORMATION!

Other sizes / pressure ratings on request.

4.1 Safety instructions



DANGER!

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!



DANGER!

Observe the national regulations for electrical installations!



DANGER!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.



WARNING!

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Grounding



DANGER!

The device must be grounded in accordance with regulations in order to protect personnel against electric shocks.

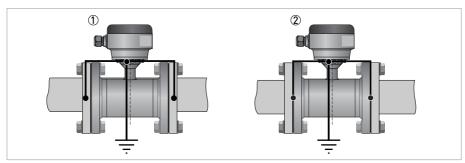


Figure 4-1: Grounding

- 1 Metal pipelines, not internally coated. Grounding without grounding rings.
- 2 Metal pipelines with internal coating and non-conductive pipelines. Grounding with grounding rings.

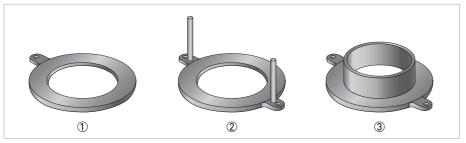


Figure 4-2: Different types of grounding rings

- 1 Grounding ring number 1
- 2 Grounding ring number 2
- 3 Grounding ring number 3

Grounding ring number 1:

• 3 mm / 0.1" thick (tantalum: 0.5 mm / 0.02")

Grounding ring number 2:

- 3 mm / 0.1" thick
- Prevents damage to the flanges during transport and installation
- Especially for flow sensors with PTFE liner

Grounding ring number 3:

- 3 mm / 0.1" thick
- With cylindrical neck (length 30 mm / 1.25" for DN10...150 / 3/8...6")
- Prevents damage to the liner when abrasive liquids are used

4.3 Virtual reference for IFC 300 (C, W and F version)

The virtual reference option on the IFC 300 flow converter provides complete isolation of the measurement circuit.

Benefits of virtual reference:

- Grounding rings or grounding electrodes can be omitted.
- Safety increases by reducing the number of potential leakage points.
- The installation of the flowmeters is much easier.

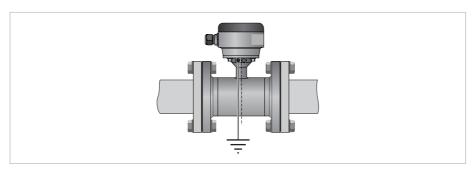


Figure 4-3: Virtual reference

Minimum requirements:

- Size: ≥ DN10
- Electrical conductivity: ≥ 200 µS/cm
- Electrode cable: max. 50 m / 164 ft, type DS

4.4 Connection diagrams



INFORMATION!

For the connection diagrams please refer to the documentation of the applicable converter.

5.1 Spare parts availability

The manufacturer adheres to the basic principle that functionally adequate spare parts for each device or each important accessory part will be kept available for a period of 3 years after delivery of the last production run for the device.

This regulation only applies to spare parts which are subject to wear and tear under normal operating conditions.

5.2 Availability of services

The manufacturer offers a range of services to support the customer after expiration of the warranty. These include repair, maintenance, technical support and training.



INFORMATION!

For more precise information, please contact your local representative.

5.3 Returning the device to the manufacturer

5.3.1 General information

This device has been carefully manufactured and tested. If installed and operated in accordance with these operating instructions, it will rarely present any problems.



CAUTION!

Should you nevertheless need to return a device for inspection or repair, please pay strict attention to the following points:

- Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that the manufacturer can only service this device if it is accompanied by the following certificate (see next section) confirming that the device is safe to handle.



CAUTION!

If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:

- to check and ensure, if necessary by rinsing or neutralizing, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.

5.3.2 Form (for copying) to accompany a returned device

Company:		Address:
Department:		Name:
Tel. no.:		Fax no.:
Manufacturer's order no. or serial no.:		
The device has been operated with the follo	owing n	nedium:
This medium is:	wate	r-hazardous
	toxic	
	caus	tic
		mable
		hecked that all cavities in the device are free from such tances.
	We h	nave flushed out and neutralized all cavities in the ce.
We hereby confirm that there is no risk to contained in the device when it is returned	persons	s or the environment through any residual media
Date:		Signature:
Stamp:		

5.4 Disposal



CAUTION!

Disposal must be carried out in accordance with legislation applicable in your country.

6.1 Measuring principle

An electrically conductive fluid flows inside an electrically insulated pipe through a magnetic field. This magnetic field is generated by a current, flowing through a pair of field coils. Inside of the fluid, a voltage U is generated:

U = v * k * B * D

in which:


v = mean flow velocity

k = factor correcting for geometry

B = magnetic field strength

D = inner diameter of flow meter

The signal voltage U is picked off by electrodes and is proportional to the mean flow velocity v and thus the flow rate q. A signal converter is used to amplify the signal voltage, filter it and convert it into signals for totalising, recording and output processing.

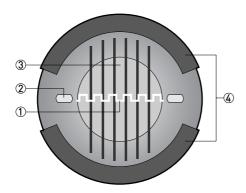

- 1 Induced voltage (proportional to flow velocity)
- 2 Electrodes
- 3 Magnetic field
- 4 Field coils

6.2 Technical data



INFORMATION!

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local representative.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

Measuring system

Measuring principle	Faraday's law of induction
Application range	Electrically conductive fluids
Measured value	
Primary measured value	Flow velocity
Secondary measured value	Volume flow

Design

•	
eatures	Fully welded maintenance-free sensor.
	Large diameter range DN253000
	Rugged liners approved for drinking water.
	Large standard range but also available in customer specific diameter, length and pressure rating.
Modular construction	The measurement system consists of a flow sensor and a signal converter. It is available as compact and as separate version. More information about the signal converter can be found in the relevant documentation.
Compact version	With IFC 100 converter: OPTIFLUX 2100 C
	With IFC 300 converter: OPTIFLUX 2300 C
Remote version	In wall (W) mount version with IFC 100 converter: OPTIFLUX 2100 W
	In field (F), wall (W) or rack (R) mount version with IFC 300 converter: OPTIFLUX 2300 F, W or R
Nominal diameter	With IFC 100 converter: DN251200 / 148"
	With IFC 300 converter: DN253000 / 1120"
Compact version Remote version	length and pressure rating. The measurement system consists of a flow sensor and a signal converte is available as compact and as separate version. More information about signal converter can be found in the relevant documentation. With IFC 100 converter: OPTIFLUX 2100 C With IFC 300 converter: OPTIFLUX 2300 C In wall (W) mount version with IFC 100 converter: OPTIFLUX 2100 W In field (F), wall (W) or rack (R) mount version with IFC 300 converter: OPTIFLUX 2300 F, W or R With IFC 100 converter: DN251200 / 148"

Measuring accuracy

Reference conditions	Flow conditions similar to EN 29104		
	Temperature: +10+30°C / +50+86°	F	
	Electrical conductivity: ≥ 300 μS/cm		
Maximum measuring	IFC 100: down to 0.3% of the measured value ±1 mm/s		
error	IFC 300: down to 0.2% of the measured value ±1 mm/s		
	The maximum measuring error deper	nds on the installation conditions.	
	For detailed information refer to Meas	suring accuracy on page 38.	
Repeatability	±0.1% of MV, minimum 1 mm/s		
Calibration / Verification	Standard:		
	Each meter is standard calibrated by	a direct volume comparison.	
	Optional:		
	Verification to Measurement Instrument Directive (MID), Annex MI-001. Standard: Verification at Ratio $(Q3/Q1) = 80$, $Q3 \ge 2$ m/s Optional: Verification at Ratio $(Q3/Q1) > 80$ on request		
	Only in combination with the IFC 300 signal converter.		
MID Annex MI-001	EC-Type examination certificate to MID Annex MI-001		
(Directive 2004/22/EC)	Only in combination with the IFC 300 signal converter.		
	Diameter range: DN25500		
	Forward and reverse (bi-directional) flow		
	Orientation: any		
	Liquid temperature range: +0.1°C / 50°C		
	For detailed information refer to Legal metrology on page 33.		
OIML R49	Certificate of conformity to OIML R49		
	Only in combination with the IFC 300 signal converter.		
	Diameter range	Class 1: DN80500	
		Class 2: DN2550	
	Forward and reverse (bi-directional) flow		
	Orientation: any		
	Liquid temperature range: +0.1°C / 50°C		
	For detailed information refer to <i>Legal metrology</i> on page 33.		

Operating conditions

Temperature			
	For Ex versions different temperatures are valid. Please refer to the relevant Ex documentation for details.		
Process temperature	Hard rubber liner: -5+80°C / 23+176°F		
	Polypropylene liner: -5+90°C / 23+194°F		
	Polyolefin liner: -5+80°C / 23+176°F		
Ambient temperature	Standard (with aluminium converter housing):		
	-40+65°C / -40+149°F		
	Protect electronics against self-heating at ambient temperatures above 55°C		
	Option (with stainless steel converter housing):		
	-40+55°C / -40+130°F		
Storage temperature	-50+70°C / -58+158°F		
Measurement range	-12+12 m/s / -40+40 ft/s		
Pressure			
EN 1092-1	DN22003000: PN 2.5		
	DN12002000: PN 6		
	DN2001000: PN 10		
	DN65 and DN100150: PN 16		
	DN2550 and DN80: PN 40		
	Other pressures on request		
ASME B16.5	124": 150 & 300 lb RF		
	Other pressures on request		
JIS	DN501000 / 240": 10 K		
	DN2540 / 11½": 20 K		
	Other pressures on request		
AWWA	Option:		
(class B or D FF)	DN7001000 / 2840": ≤ 10 bar / 145 psi		
	DN12002000 / 4880": ≤ 6 bar / 87 psi		
Vacuum load	For detailed information refer to Vacuum load on page 42.		
Pressure loss	Negligible		
Chemical properties			
Physical condition	Electrically conductive liquids		
Electrical conductivity	Standard: ≥ 5 µS/cm		
	Demineralized water: ≥ 20 μS/cm		
Permissible gas content	IFC 100: ≤ 3%		
(volume)	IFC 300: ≤ 5%		
Permissible solid content	IFC 100: ≤ 10%		
(volume)	IFC 300: ≤ 70%		

Installation conditions

Installation	Assure that the flow sensor is always fully filled.
	For detailed information refer to <i>Installation</i> on page 11.
Flow direction	Forward and reverse
	Arrow on flow sensor indicates flow direction.
Inlet run	≥ 5 DN
Outlet run	≥ 2 DN
Dimensions and weights	For detailed information refer to <i>Dimensions and weights</i> on page 39.

Materials

Sensor housing	Sheet steel		
	Other materials on request		
Measuring tube	Austenitic stainless steel		
Flanges	Carbon steel		
	Other materials on request		
Liner	Standard:		
	DN25150 / 16": polypropylene		
	DN2003000 / 8120": hard rubber		
	Option:		
	DN25150 / 16": hard rubber		
	DN2001000 / 840": polyolefin		
Protective coating	On exterior of the meter: flanges, housing, signal converter (compact version) and / or connection box (field version)		
	Standard: polyurethane coating		
	Option: subsoil coating, offshore coating		
Connection box	Only for remote versions		
	Standard: die-cast aluminium		
	Option: stainless steel		
Measuring electrodes	Standard: Hastelloy [®] C		
	Option: stainless steel, titanium		
	Other materials on request		
Grounding rings	Standard: stainless steel		
	Option: Hastelloy® C, titanium, tantalum		
	Grounding rings can be omitted with virtual reference option for the IFC 300 signal converter.		
Reference electrode	Standard: Hastelloy® C		
(optional)	Option: stainless steel, titanium		
	Other materials on request		

Process connections

Flange	
EN 1092-1	DN253000 in PN 2.540
ASME	124" in 150 & 300 lb RF
JIS	DN251000 in 1020 K
AWWA	DN7002000 in 610 bar
Design of gasket surface	RF
	Other sizes or pressure ratings on request.

Electrical connections

	For full details, including power supply and power consumption etc., see technical datasheet of the relevant signal converter.				
Signal cable (remote version	ons only)				
Type A (DS)	In combination with the IFC 100 and IFC 300 signal converter				
	Standard cable, double shielded. Max. length: 600 m / 1950 ft (dep. on electrical conductivity and measuring sensor).				
	For detailed information refer to the documentation of the relevant signal converter.				
Type B (BTS)	Only in combination with the IFC 300 signal converter				
	Optional cable, triple shielded. Max. length: 600 m / 1950 ft (dep. on electrical conductivity and measuring sensor).				
	For detailed information refer to the documentation of the relevant signal converter.				
1/0	For full details of I/O options, including data streams and protocols, see technical datasheet of the relevant signal converter.				

Approvals and certificates

CE		
	This device fulfils the statutory requirements of the EC directives. The manufacturer certifies successful testing of the product by applying the CE mark.	
Electromagnetic	Directive: 2004/108/EC, NAMUR NE21/04	
compatibility	Harmonized standard: EN 61326-1 : 2006	
Low voltage directive	Directive: 2006/95/EC	
	Harmonized standard: EN 61010 : 2001	
Pressure equipment	Directive: 97/23/EC	
directive	Category I, II, III or SEP	
	Fluid group 1	
	Production module H	

Hazardous areas				
ATEX	Please check the relevant Ex documentation for details.			
	Compact version with IFC 100 signal converter			
	II 2 GD			
	Compact version with IFC 300 signal converter			
	II 2 GD or II 2(1) GD			
	Remote version			
	II 2 GD			
FM	In combination with IFC 300 signal converter			
	Class I, Div. 2, Groups A, B, C and D			
	Class II, Div. 2, Groups F and G			
	Class III, Div. 2, Groups F and G			
CSA	In combination with IFC 300 signal converter			
	Class I, Div. 2, Groups A, B, C and D			
	Class II, Div. 2, Groups F and G			
NEPSI	GYJ05234 / GYJ05237			
	Ex me ia IIC T6T3			
	Ex de ia II T6T3			
	Ex qe ia IIC T6T3			
	Ex e ia IIC T6T3			
Other approvals and standa	ards			
Custody transfer	Only in combination with the IFC 300 signal converter.			
	MID Annex MI-001 type examination certificate			
	OIML R49 certificate of conformity			
	Conformity with ISO 4064 and EN 14154			
Drinking water approvals	Hard rubber liner: NSF / ANSI standard 61			
	Polypropylene liner: ACS, KIWA, KTW, NSF / ANSI standard 61, WRAS			
	Polyolefin liner: ACS, KTW, DVGW-W270, WRAS (in preparation)			
Protection category acc.	Standard:			
to IEC 529 / EN 60529	IP66 / 67 (NEMA 4/4X/6)			
	Option:			
	IP68 (NEMA 6P)			
	IP68 is only available for separate design and with a stainless steel connection box.			
Shock test	IEC 68-2-27			
	30 g for 18 ms			
Vibration test	IEC 68-2-64			
	f = 20 - 2000 Hz, rms = 4.5 g, t = 30 min.			

6.3 Legal metrology



INFORMATION!

OIML R49 and MID Annex MI-001 is **only** available in combination with the IFC 300 signal converter!

6.3.1 OIML R49

The OPTIFLUX 2000 has a certificate of conformity with the international recommendation OIML R49. The certificate has been issued by NMi (Dutch board of weight and measures). The OIML R49 recommendation (2006) concerns water meters intended for the metering of cold potable and hot water. The measuring range of the flowmeter is determined by Q3 (nominal flow rate) and R (ratio).

The OPTIFLUX 2000 meets the requirements for water meters of accuracy class 1 and 2.

- For accuracy class 1, the maximum permissible error for water meters is ±1% for the upper flow rate zone and ±3% for the lower flow rate zones.
- For accuracy class 2, the maximum permissible error for water meters is ±2% for the upper flow rate zone and ±5% for the lower flow rate zones.

According to OIML R49, accuracy class 1 designation shall be applied only to flowmeter with $0.3 \ge 100 \text{ m}^3/\text{h}$.

Q1 = Q3 / R

Q2 = Q1 * 1.6

Q3 = Q1 * R

Q4 = Q3 * 1.25

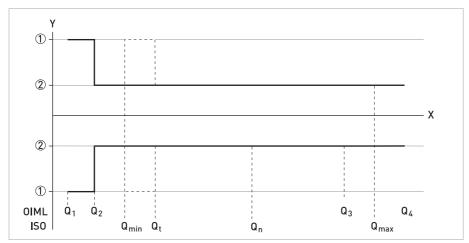


Figure 6-1: ISO flow rates added to figure as comparison towards OIML

X: Flow rate

Y [%]: Maximum measuring error

- 1 ±3% for class 1, ±5% for class 2 devices
- 2 ±1% for class 1, ±2% for class 2 devices

OIML R49 Class 1

DN	Span (R)	Flow rate [m ³ /h]				
	(14)	Minimum Q1	imum Q1 Transitional Q2 Permanent Q3 Overload			
80	640	0.25	0.40	160	200.0	
100	625	0.40	0.60	250	312.5	
150	667	0.60	1.00	400	500.0	
250	1000	1.60	2.60	1600	2000.0	
500	500	12.60	20.20	6300	7875.0	

OIML R49 Class 2

DN	Span (R)	Flow rate [m ³ /h]				Flow rate [m ³ /h]			
	(14)	Minimum Q1	Overload Q4						
25	400	0.040	0.064	16	20.0				
50	400	0.100	0.160	40	50.0				

6.3.2 MID Annex MI-001

All new designs of water meters that are to be used for legal purposes in Europe require certification under the Measurement Instrument Directive (MID) 2004/22/EC. Annex MI-001 of the MID applies to water meters intended for the measurement of volume of clean, cold or heated water in residential, commercial and light industrial use. An EC-type examination certificate is valid in all countries of the European Union.

The OPTIFLUX 2300 has an EC-type examination certificate and can be verified to the MID Annex MI-001 for water meters with diameter DN25...DN300. The conformity assessment procedure followed for OPTIFLUX 2300 is Module B (Type Examination) and Module D (Quality Assurance of the Production Process).

The maximim permissible error on volumes delivered between Q2 (transitional) flow rate and Q4 (overload) flow rate is ±2%.

The maximum permissible error on volumes delivered between Q1 (minimum) flow rate and Q2 (transitional) flow rate is ±5%.

Q1 = Q3 / R

Q2 = Q1 * 1.6

Q3 = Q1 * R

Q4 = Q3 * 1.25

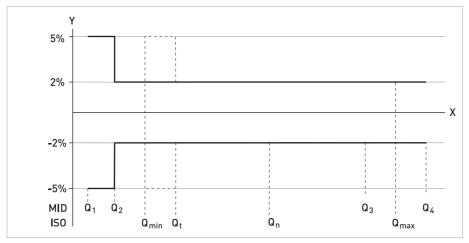


Figure 6-2: ISO flow rates added to figure as comparison towards MID

X: Flow rate

Y [%]: Maximum measuring error

MI-001 certified flow characteristics

DN	Span (R) Q3 / Q1	Flow rate [m ³ /h]				Flow rate [m³/h]		
	237 21	Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4			
25	400	0.040	0.064	16	20.0			
32	400	0.063	0.100	25	31.3			
40	400	0.063	0.100	25	31.3			
50	400	0.100	0.160	40	50.0			
65	625	0.160	0.256	100	125.0			
80	640	0.250	0.400	160	200.0			
100	625	0.400	0.640	250	312.5			
125	667	0.600	0.960	400	500.0			
150	667	0.600	0.960	400	500.0			
200	1000	1.000	1.600	1000	1250.0			
250	1000	1.600	2.560	1600	2000.0			
300	1000	2.500	4.000	2500	3125.0			
350	500	5.000	8.000	2500	3125.0			
400	500	8.000	12.800	4000	5000.0			
450	500	8.000	12.800	4000	5000.0			
500	500	12.600	20.160	6300	7875.0			



INFORMATION!

Verification to MI-001 is carried out at the following values for R, Q1, Q2 and Q3. Verification at other values for R and Q3 available on request.

Verification to MI-001

DN	Span (R) Q3 / Q1	Flow rate [m ³ /h]		
	207 21	Q1	Q2	Q3
25	80	0.050	0.080	4
32	80	0.125	0.200	10
40	80	0.125	0.200	10
50	80	0.200	0.320	16
65	80	0.313	0.500	25
80	80	0.500	0.800	40
100	80	0.788	1.260	63
125	80	1.250	2.000	100
150	80	2.000	3.200	160
200	80	3.125	5.000	250
250	80	5.000	8.000	400
300	80	7.875	12.600	630
350	80	12.500	20.000	1000
400	80	12.500	20.000	1000
450	80	20.000	32.000	1600
500	80	20.000	32.000	1600

6.4 Measuring accuracy

Each flowmeter is standard wet calibrated under reference conditions by direct volume comparison. The performance of the flowmeter is defined and documented in an individual water meter calibration certificate.

Reference conditions

· Medium: water

Temperature: +10...30°C / +50...86°F
Operating pressure: 1 bar / 14.5 psi

• Inlet section: ≥ 5 DN

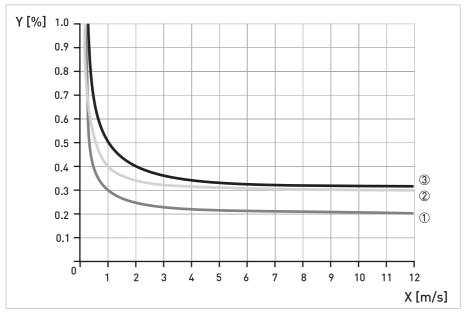


Figure 6-3: Flow velocity vs. accuracy


X [m/s] : flow velocity

Y [%]: deviation from the actual measured value (mv)

In combination with IFC 300 signal converter	Accuracy	Curve
DN251600 / 164"	0.2% of mv + 1 mm/s	1
DN16003000 / > 64"	0.3% of mv + 2 mm/s	3

In combination with IFC 100 signal converter	Accuracy	Curve
DN251200 / 148"	0.3% of mv + 1 mm/s	2

6.5 Dimensions and weights

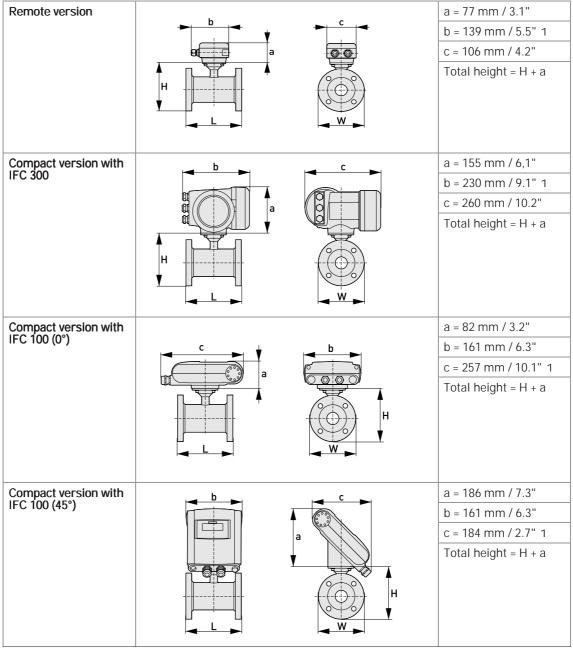

¹ The value may vary depending on the used cable glands.



INFORMATION!

- All data given in the following tables are based on standard versions of the sensor only.
- Especially for smaller nominal sizes of the sensor, the converter can be bigger than the sensor.
- Note that for other pressure ratings than mentioned, the dimensions may be different.
- For full information on converter dimensions see relevant documentation.

EN 1092-1

Nominal	Dimensions [mm]				
size DN [mm]	Standard length	ISO Insertion length	Н	W	weight [kg]
25	150	200	140	115	5
32	150	200	157	140	6
40	150	200	166	150	7
50	200	200	186	165	11
65	200	200	200	185	9
80	200	200	209	200	14
100	250	250	237	220	15
125	250	250	266	250	19
150	300	300	300	285	27
200	350	350	361	340	34
250	400	450	408	395	48
300	500	500	458	445	58
350	500	550	510	505	78
400	600	600	568	565	101
450	600	-	618	615	111
500	600	-	671	670	130
600	600	-	781	780	165
700	700	-	898	895	248
800	800	-	1012	1015	331
900	900	-	1114	1115	430
1000	1000	-	1225	1230	507
1200	1200	-	1417	1405	555
1400	1400	-	1619	1630	765
1600	1600	-	1819	1830	1035
1800	1800	-	2027	2045	1470
2000	2000	-	2259	2265	1860

ASME B16.5 / 150 lb flanges

Nominal size	Dimensions [inches]			Approx. weight
[inches]	L	Н	W	[lb]
1"	5.91	5.39	4.25	7
1½"	5.91	6.10	5.00	11
2"	7.87	7.05	5.98	18
3"	7.87	8.03	7.50	26
4"	9.84	9.49	9.00	44
5"	9.84	10.55	10.00	49
6"	11.81	11.69	11.00	64
8"	13.78	14.25	13.50	95
10"	15.75	16.30	16.00	143
12"	19.69	18.78	19.00	207
14"	27.56	20.67	21.00	284
16"	31.50	22.95	23.50	364
18"	31.50	24.72	25.00	410
20"	31.50	26.97	27.50	492
24"	31.50	31.38	32.00	675


ASME B16.5 / 300 lb flanges

Nominal size	Dimensions [inches]			Approx. weight
[inches]	L	Н	W	[lb]
1"	5.91	5.71	4.87	11
1½"	7.87	6.65	6.13	13
2"	9.84	7.32	6.50	22
3"	9.84	8.43	8.25	31
4"	11.81	10.00	10.00	44
6"	12.60	12.44	12.50	73
8"	15.75	15.04	15.00	157
10"	19.69	17.05	17.50	247
12"	23.62	20.00	20.50	375
14"	27.56	21.65	23.00	474
16"	31.50	23.98	25.50	639
20"	31.50	28.46	30.50	937
24"	31.50	33.39	36.00	1345

6.6 Vacuum load

Diameter	Vacuum load in mbar abs. at a process temperature of			
[mm]	20°C	40°C	60°C	80°C
Hard rubber				
DN200300	250	250	400	400
DN3501000	500	500	600	600
DN12003000	600	600	750	750
Polypropylene				
DN25150	250	250	400	400
Polyolefin				
DN2001000	0	0	0	0

Diameter	Vacuum load in psia at process temperature of			
[inches]	68°F	104°F	140°F	176°F
Hard rubber				
812"	3.6	3.6	5.8	5.8
1440"	7.3	7.3	8.7	8.7
48120"	8.7	8.7	10.9	10.9
Polypropylene				
16"	3.6	3.6	5.8	5.8
Polyolefin				
840"	0	0	0	0

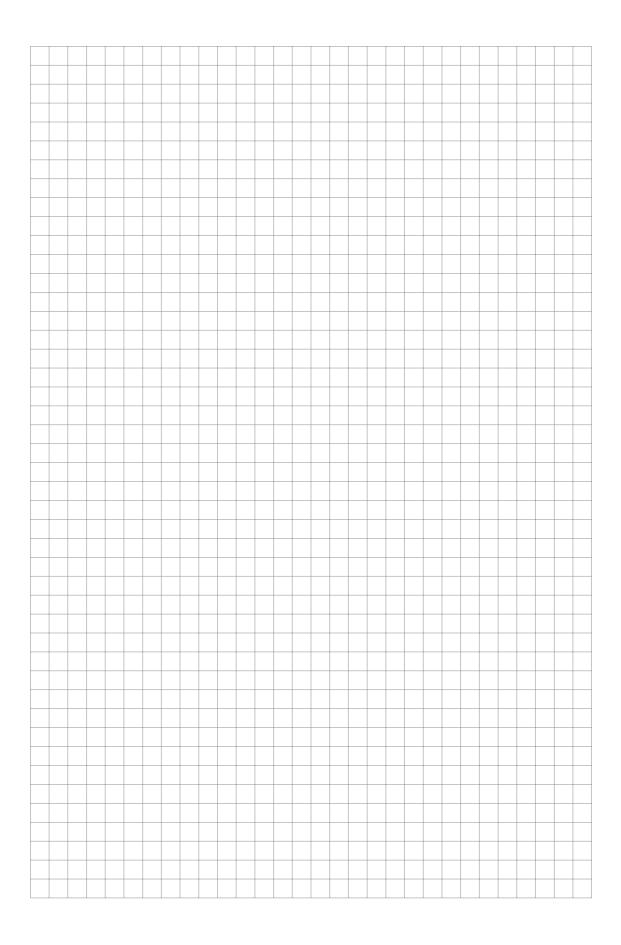



KROHNE product overview

- Electromagnetic flowmeters
- · Variable area flowmeters
- Ultrasonic flowmeters
- Mass flowmeters
- Vortex flowmeters
- Flow controllers
- Level meters
- Temperature meters
- Pressure meters
- Analysis products
- Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Str. 5 47058 Duisburg (Germany) Tel.:+49 (0)203 301 0 Fax:+49 (0)203 301 10389

info@krohne.de

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

